


LEGEND

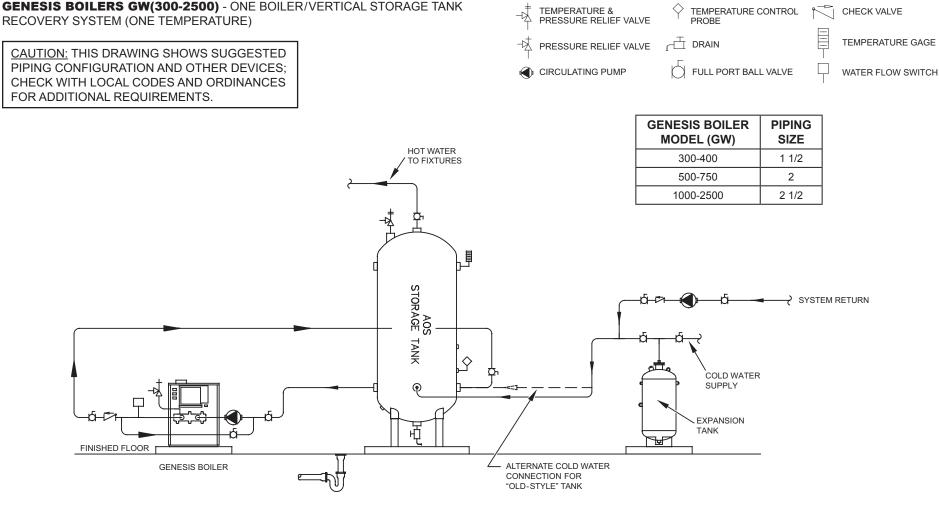

NOTES:

- 1. Preferred piping layout.
- 2. The temperature and pressure relief valve setting shall not exceed pressure rating of any component in the system.
- 3. Service valves are shown for servicing boiler. However, local codes shall govern their usage.
- 4. A. O. Smith piping method is based on 50 equivalent feet of piping. Boiler placement shall be as close as practical
- to the storage tank. Applications in excess of these recommendations shall require a licensed engineer for design assistance.
- 5. Pumps are mounted on rear header of each boiler. (1000-2500)

For Technical Information and Automated Fax Service, call 800-527-1953 or visit www.hotwater.com. A. O. Smith Corporation reserves the right to make product changes or improvements without prior notice.