



- 1. Preferred piping layout.
- 2. The temperature and pressure relief valve setting shall not exceed pressure rating of any component in the system.
- 3. Service valves are shown for servicing boiler. However, local codes shall govern their usage.
- 4. A. O. Smith piping method is based on 50 equivalent feet of piping. Boiler placement shall be as close as practical to the storage tank. Applications in excess of these recommendations shall require a licensed engineer for design assistance.
- 5. Temperature control probe (Quad Thermistor Probe, P/N 9006905005) can be installed onto the system return loop, and connected to each boiler.

For Technical Information and Automated Fax Service, call 800-527-1953 or visit www.hotwater.com. A. O. Smith Corporation reserves the right to make product changes or improvements without prior notice.